
Assembly instructions for mesura Automobil Measurement Rack Isofix light line MA1101

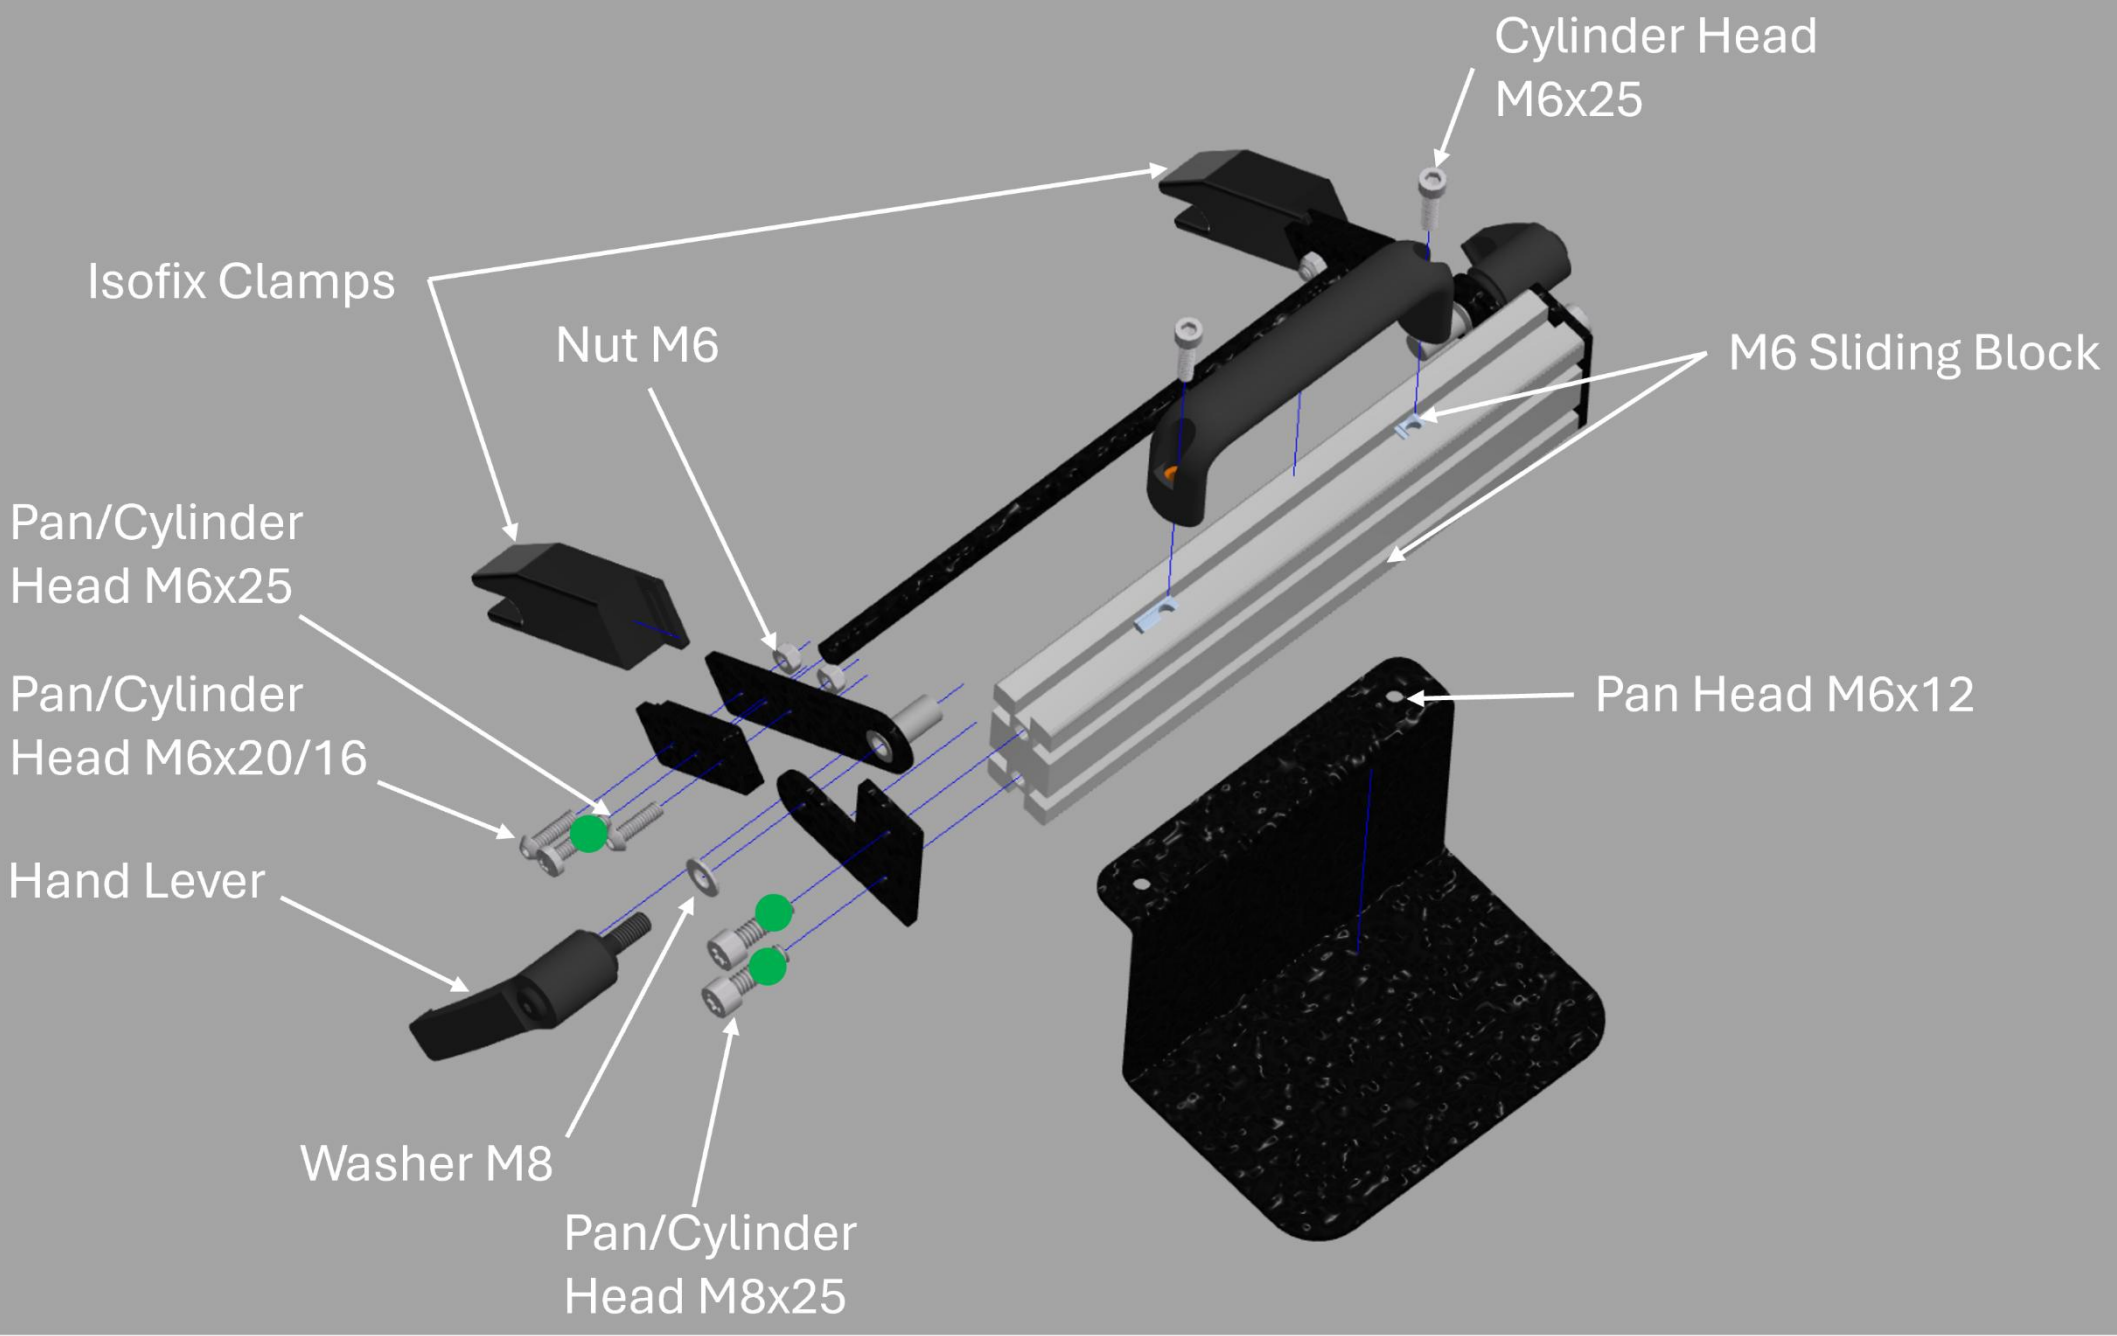

Jan Stahl
mesura Automobil
Schulstraße 2
56203 Höhr-Grenzhausen
Deutschland

v1.0


Cylinder Head
M6x25
Isofix Clamps
Nut M6
M6 Sliding Block
Pan/Cylinder
Head M6x25
Pan/Cylinder
Head M6x20/16
Pan Head M6x12
Hand Lever
Washer M8
Pan/Cylinder
Head M8x25

Assembly instructions:

- Please mount all parts with the shipped screws, nuts and washers.
- Please use normal tightening torques.
- Please put medium-strength threadlocker onto the green marked screws.
- Used screws and nuts can vary slightly depending on the used setup.

In case of questions please contact info@mesura-automobil.de.

Jan Stahl

mesura Automobil

Schulstraße 2

56203 Höhr-Grenzhausen

Germany